

ANNUNCIOM

PS1

Quick Install Guide

Version 2.0

IP Intercom, Public Address and Paging Device

Package contents

- a Annunicom PS1
- b Desktop stand with 2 screws and 6 rubber feet

Annunicom PS1 microphone Kit (not included)

- c Guiding bracket for gooseneck mic
- d Mini-jack gooseneck microphone

Firmware

This device comes preloaded with standard firmware.
Alternative firmware can be downloaded from www.barix.com.

Support

For support please contact your local dealer or visit www.barix.com.

Front view



A Push button A (input 0)

Pushing or holding the button pressed will trigger functions depending on the loaded application. The light ring shows the device status using a green and red LED (resulting in orange when both are lit)

B Push button B (input 1)


Pushing or holding the button pressed will trigger functions depending on the loaded application. The light ring and center show the digital output status (Relay 1) using a white LED (flashing rapidly during boot sequence).

C Volume dial (Potentiometer)

D Built-in microphone

E Built-in loudspeaker

Rear view

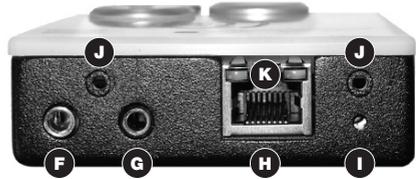

F Microphone input (mini stereo jack socket)

Pin	Description
tip	Microphone input *
ring	Bias Power (2.7 VDC)
end	Ground [G]

* when plugged in disables the built-in MIC

G Headphones output (mini stereo jack socket)

Pin	Description
tip	Headphone left
ring	Headphone right
end	Ground [G]

* when plugged in disables the built-in loudspeaker

H PoE LAN port 10/100 (RJ45 socket)

Pin	LAN	PoE *
1	Tx +	V+ mode A
2	Tx -	V+ mode A
3	Rx +	V - mode A
4, 5	spare	V+ mode B
6	Rx -	V - mode A
7, 8	spare	V - mode B

* PoE 802.3af Class 0, 8 Watt max.

I Reset button

A brief press of the button will reset the device. Holding the reset button pressed in for approximately 10 seconds will reset the device and restore the factory default settings when the button is released.

J Mounting holes

For screwing on the desktop stand. The left hole can be used for mounting the gooseneck microphone guiding bracket.

K LAN status LEDs

Green LED for Link, yellow LED for Activity

1 Installation

STEP 1

Use the built-in loudspeaker or plug a standard headphones into the mini jack (G).

STEP 2

Plug a standard (straight) network cable (not included) into the network port (H) of the Annunicom and the other end into your PoE capable switch. You can also use a crossover network cable (not included) and a 48V PoE injector for a direct connection to your PC.

STEP 3

- i) The Annunicom will now acquire an IP address and announce it over the speaker/headphones (if no DHCP server is available this can take up to 5 minutes).
- ii) If you did not connect any audio outputs in step 1, either see the next page for the ARP command procedure, or use the "Barix Discovery Tool" Java application (download the latest version from www.barix.com) on your computer (Windows, Mac or Linux) and click the "Get" button to find out which IP address the device has obtained (see picture at the bottom of the page). Make sure that the Ethernet address (MAC) matches your device (see label on the bottom of the device).

Now that you know the IP address proceed to the next section "Network configuration by web browser".

If you were not able to obtain the device's current IP address with the previous steps see section "Troubleshooting".

2 Network configuration by web browser

Most Barix applications require no configuration but use DHCP to configure network settings dynamically. If you need to use static (fixed) network settings follow steps 1 to 3, otherwise continue from step 4.

STEP 1

Open your web browser.

STEP 2

Enter the IP address that was announced by the Annunicom and press Enter. Example: 192.168.0.12 Click on the Configuration button, then on Advances Settings/Network.

NETWORK SETTINGS

Use SerialIP	<input checked="" type="radio"/> Yes <input type="radio"/> No
IP Address	<input type="text" value="0 . 0 . 0 . 0"/>
Netmask	<input type="text" value="0 . 0 . 0 . 0"/>
Gateway IP Address	<input type="text" value="0 . 0 . 0 . 0"/>
Primary DNS	<input type="text" value="0 . 0 . 0 . 0"/>
Alternative DNS	<input type="text" value="0 . 0 . 0 . 0"/>
Syslog Address	<input type="text" value="0 . 0 . 0 . 0"/>
DHCP Host Name	<input type="text"/>
Web Server Port	<input type="text" value="80"/>

STEP 3

In order to make the application work the following parameters must be set (check with your network administrator):

- static IP address (the default «0.0.0.0» sets automatic discovery: BootP, DHCP) and netmask


If you your devices are connected via routers also:

- Gateway IP address

Hit the «Apply» button to save all changes. The device will reboot with the configured IP address.

STEP 4

To complete the application setup, download the firmware documentation from www.barix.com. Download the product manual for additional information about the hardware installation, technical and mechanical details as well as instructions on updating or changing the loaded application firmware.



3 Setting temporary IP address using ARP command

This procedure will work only in a local network. After this procedure the temporary IP will be active only until restart/reboot. After a restart the procedure has to be repeated.

STEP 1

Either use a network cable to link the Annunicom and the PC directly, or connect the Annunicom to the PC via your network switch and power the device. Make sure that you have a valid static IP address configured on your PC (e.g. 192.168.0.2)

STEP 2

Windows : For a command window, click on «Start», click on «Run...», in the «Open» field type `cmd`, click on «OK». OSX / Linux : Open a terminal window.

STEP 3

Please proceed to step 4 if you linked the PC directly to the device in step 1. To ensure that you use a free IP address (not already used by another device in the network) please use the Ping command. To verify availability in this example we assume the PC to have the IP address «192.168.0.2» and want to check if «192.168.0.6» is free. Type `ping 192.168.0.6` and hit the «Enter» key. You should get no reply which gives you reasonable assertion that the «pinged» IP is available.

STEP 4

Look for the Annunicom's MAC address printed on a label on the bottom of the device (12 hex digits, separated by a hyphen every 2 digits). Type into the windows command window

```
arp -s 192.168.0.6 00-08-E1-00-B1-77
```

or on a OSX or Linux system type into the terminal

```
arp -s 192.168.0.6 00:08:E1:00:B1:77
```

and hit the «Enter» key (replace the digits according to your devices MAC address). You must have administrative rights to be able to do so (sudo on OSX / Linux).

STEP 5

Now we have to make the Annunicom listen to the IP address «192.168.0.6» using the Telnet command. To do so type into the command window `telnet 192.168.0.6 1` and hit the «Enter» key (the number «one» must be there for this command to work correctly !!!). The Annunicom will immediately refuse the connection on port 1, but will be available for browser access as long as the device stays powered.

STEP 6

To check if the Annunicom is responding you can use the ping command again. To do so type `ping 192.168.0.6` and hit the «Enter» key. If you do get a reply the IP address 192.168.0.6 can be used to access the Annunicom using a web browser. Please go back to section «2 Network configuration by web browser» to configure a static IP address. If you do get «request timed out» then please repeat step 5 carefully (you most likely mistyped the telnet command) or repeat the entire procedure. If the ARP method does not work for you, refer to the user manual for further methods.

4 Troubleshooting

- If the status LEDs (A) stay dark check the PoE power cabling (installation step 2).
- Check if the green LINK LED (K) is lit, if it is not then check your network cabling (network port H).
- If you have doubts about the current device settings you can revert the device to its factory defaults by pressing the Reset button (I) until the red status LED (A) blinks rapidly (takes about 10 seconds). The device will reboot once the button is released.

For information about our products, manuals, technical documentation, latest firmware, support and access to the user forum please visit www.barix.com.

BARIX

Barix AG, Seefeldstrasse 303, CH-8008 Zürich

P +41 43 433 22 11

info@barix.com, www.barix.com
